


Instruction Sheet for Installing Check Valve Winderosa Snowmobile Catalog: Item # 451470

General exploded view
Individual units covered on this instruction sheet

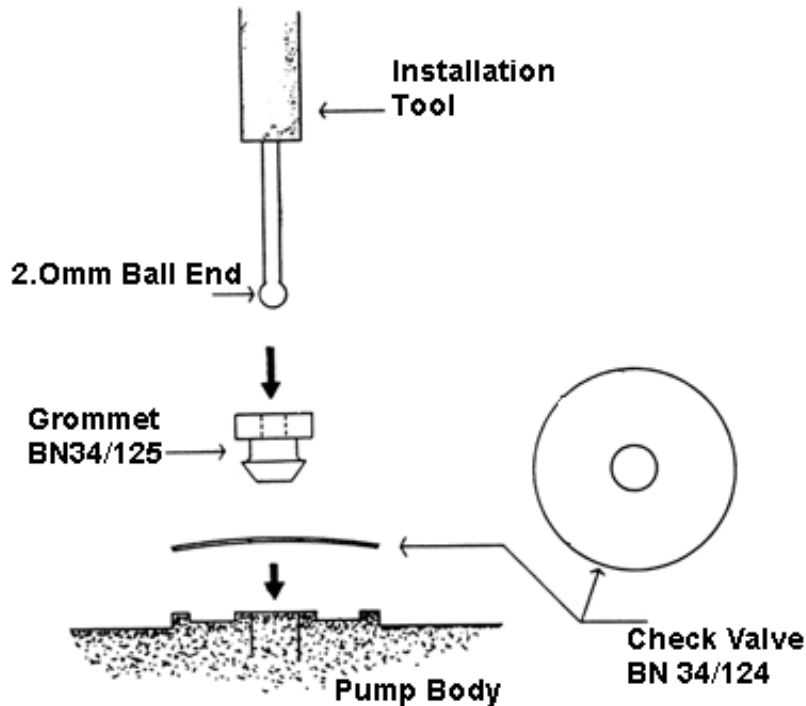

Procedure:

1. The check valves (BN34/124) must be installed as shown with the concave side towards the pump body. Failure to do so may result in improper sealing by the check valves. The check valves are supplied by the maker in rolls. This results in the check valves having a permanent "curl".
2. The use of an installation tool (not included in this kit) will facilitate installation of the grommet. Apply oil to tip of grommet, insert tool end into the hole in the head of the grommet, and punch in until grommet is properly seated. Repeat above procedure for the other check valve.

Winderosa Snowmobile Catalog: Item # 451470

Mikuni check valve grommet installation tool.

Works on grommets found in most Mikuni pumps and Super BN carburetors.